



# VACATION RENTAL TIP SHEET

# Schlage

## Connect™

SMART DEADBOLT

### How do I enter an access code to unlock the door with the touchscreen?

To unlock the door with the touchscreen, simply enter your user code on the keypad. A green success check mark will flash twice and one beep will sound.

A red X after pressing the numbers indicates an incorrect user code used.

### How do I lock the deadbolt with the touchscreen?

Press the Schlage button on the touchscreen on the exterior side of the lock. The green check mark will light once.

### How do I lock the deadbolt on the interior side of the door?

Simply use the thumbturn to lock and unlock the door from the inside.

### How do I light up the touchscreen to see the numbers at night?

If lighting is low, press the Schlage button at the top of the lock to illuminate the touchscreen.

### Will the lock still work if the power goes out?

Yes. All Schlage smart locks are battery operated, so they will continue to work during a power outage.

### The deadbolt's alarm is going off. What do I do?

An alarm may sound when the deadbolt senses force applied to the door, tampering with the lock and other similar disturbances. To silence a false alarm, press the Schlage button on the interior side of the deadbolt until the sound stops.

### A red X is flashing after I enter a code. What does this mean?

A flashing red X means that the battery is low. This is a good time to change the battery.

### How do I change the batteries?

The Schlage Connect™ Smart Deadbolt requires four new AA alkaline batteries, installed on the interior side of the lock.

- Remove the black battery cover on the interior side of the lock by sliding it up.
- Unsnap the battery connector (a short wire), remove the battery tray and replace the batteries.
- Replace the battery tray with the batteries facing the door. Snap the battery connector to the tray and replace the cover.

### Icons and Lights

- Green check: A correct user code was entered.
- Solid red X: An incorrect user code was entered.
- Flashing red X: The battery is low.

You can contact Schlage at any time for help using the lock on Twitter (@Schlage\_Locks) or Facebook (facebook.com/Schlagelocks).