



 
47282155

B-Series FSIC Deadbolts




B60R, B60(F)R, B62R

Installation Instructions | Instrucciones de instalación | Instructions d'installation

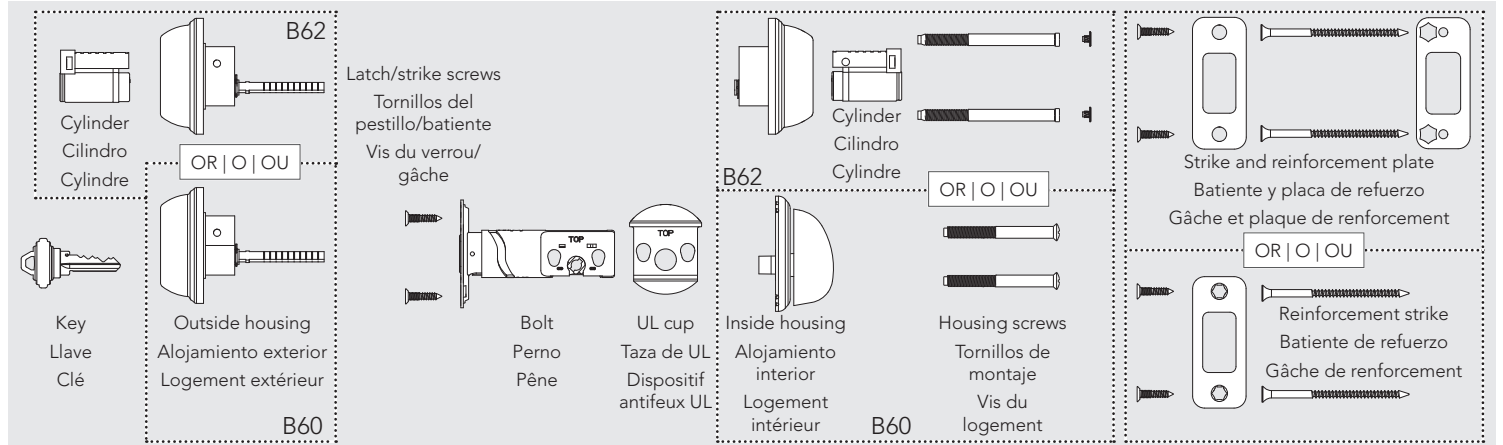

1 Check door preparation.

 Verifique la preparación de la puerta.
Vérifiez la préparation de la porte.

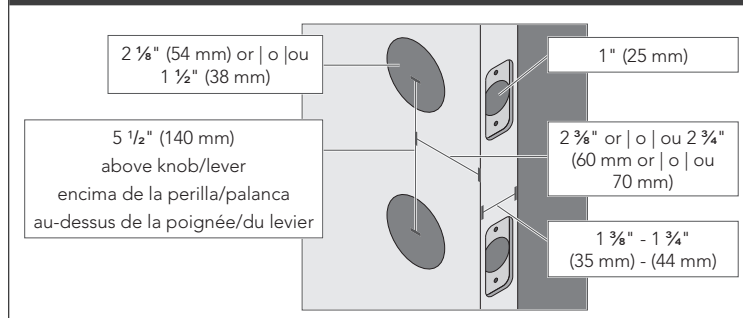


If dimensions do not match, you may need to modify your door.
Si las dimensiones no coinciden, es posible que deba modificar su puerta.
Si les dimensions ne correspondent pas, vous devrez peut-être modifier votre porte.



alle.co/b60prep

2 For B60F, B60CS Only: install UL cup.

 Sólo para B60F, B60CS: instale la taza de UL.
Pour B60F, B60CS seulement : installez le dispositif antifeux UL.

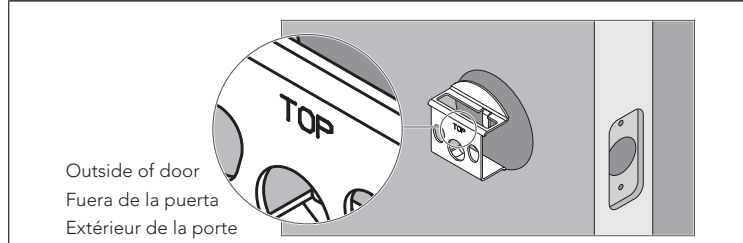


Customer Service Servicio al cliente Service à la clientèle

U.S.A.: 888-805-9837 Mexico: 018005067866
Canada: 800-900-4734 www.schlage.com
Warranty: alle.co/reswarranty

3 Install the bolt.

Instale el perno.
Installez le pêne.

 
Adjust bolt as necessary.
Ajuste el perno según sea necesario.
Réglez le pêne au besoin.

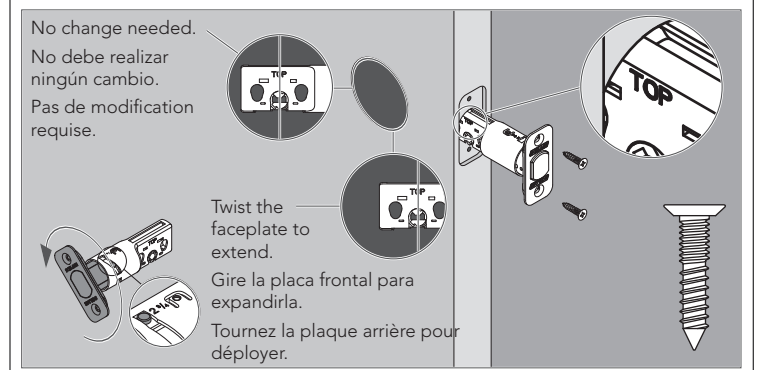

No mortise? See **Drive-in faceplate**.
Sin mortaja? Ver **Placa frontal de inserción**.
Pas de mortaise? Voir **Têtière encastrable**.

4 If necessary, remove ring.


 
Si es necesario, retire anillo.
Le cas échéant, retirez bague.

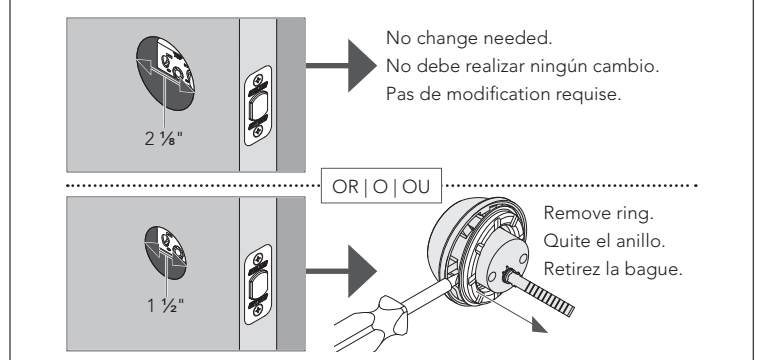

5 B62R Only: Adjust driver bar.

Solo B62R: Ajuste la barra del desarmador.

  Uniquement pour le modèle B62R : Ajustez la barre du pilote.

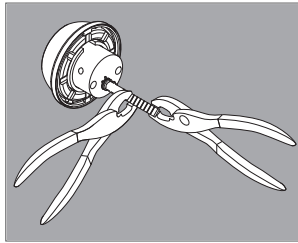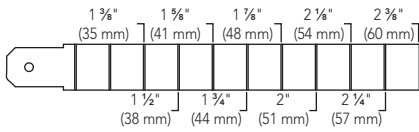

6 Install the outside housing.

 
Instalación del alojamiento exterior.

Installation du logement extérieur.

Choose the image that matches your door.

Elija la imagen que coincida con su puerta.


Choisissez l'image qui correspond à votre porte.

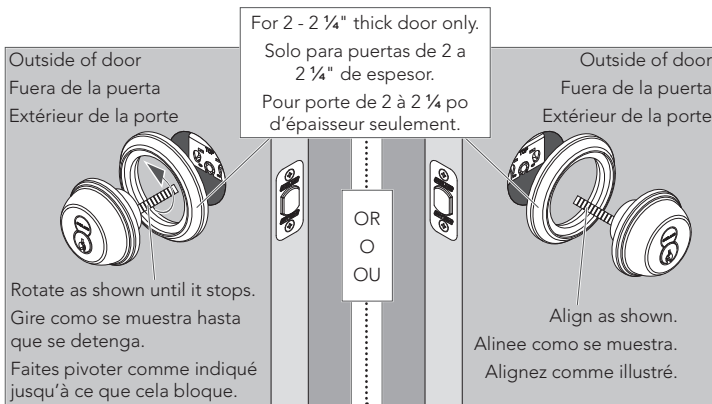

7 Install the inside housing.

Instalación del alojamiento interior.

 Installation du logement intérieur.

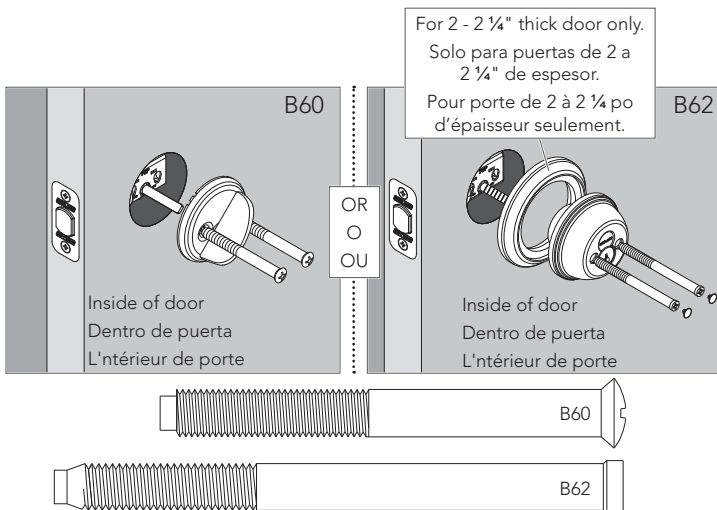

8 Install the strike.

 
Instale la placa hembra.

Installer la gâche.

Hole must be at least 1 1/4" (32 mm) deep.

El orificio debe tener al menos 1 1/4" (32 mm) de profundidad.

Le trou doit avoir une profondeur d'au moins 32 mm (1 1/4 po).



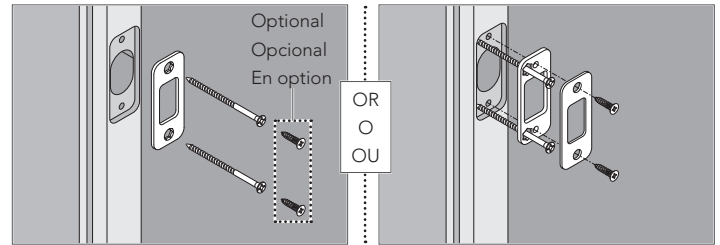


Test lock. | Probar la cerradura. | Essayez la serrure.

1. Try locking and unlocking from outside.
Intento de bloqueo y desbloqueo desde el exterior.
Essayez de verrouiller et de déverrouiller depuis l'extérieur.
2. If lock will not lock and unlock, remove lock and rotate tailpiece 90° (see step 6).
Si la cerradura no se bloquea y desbloquea, retírela y gire la pieza final 90° (vea el paso 6).
Si le verrou ne se verrouille pas et ne se déverrouille pas, retirez-le et tournez la queue de pêne à 90° (voir étape 6).
3. Reinstall the lock and restest.
Vuelva a instalar la cerradura y pruebe nuevamente.
Réinstallez le verrou et réessayez.

Change faceplate. | Cambio de placa delantera. | Changer le têtère.

   1. Remove faceplate.
Retire la placa frontal.
Enlevez la plaquette.
2. Remove backplate.
Retire la placa posterior.
Enlevez la plaque arrière.
3. Install drive-in faceplate.
Instale la placa delantera de inserción.
Installer têtère encastrable.

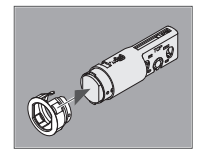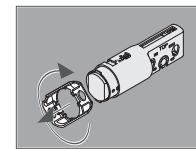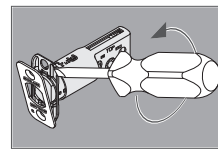

Cylinder installation | Instalación del cilindro | Installation du cylindre

